



LUMINOS
INDUSTRIES LTD.

I3000/I3005 3-Axis Positioner User Manual

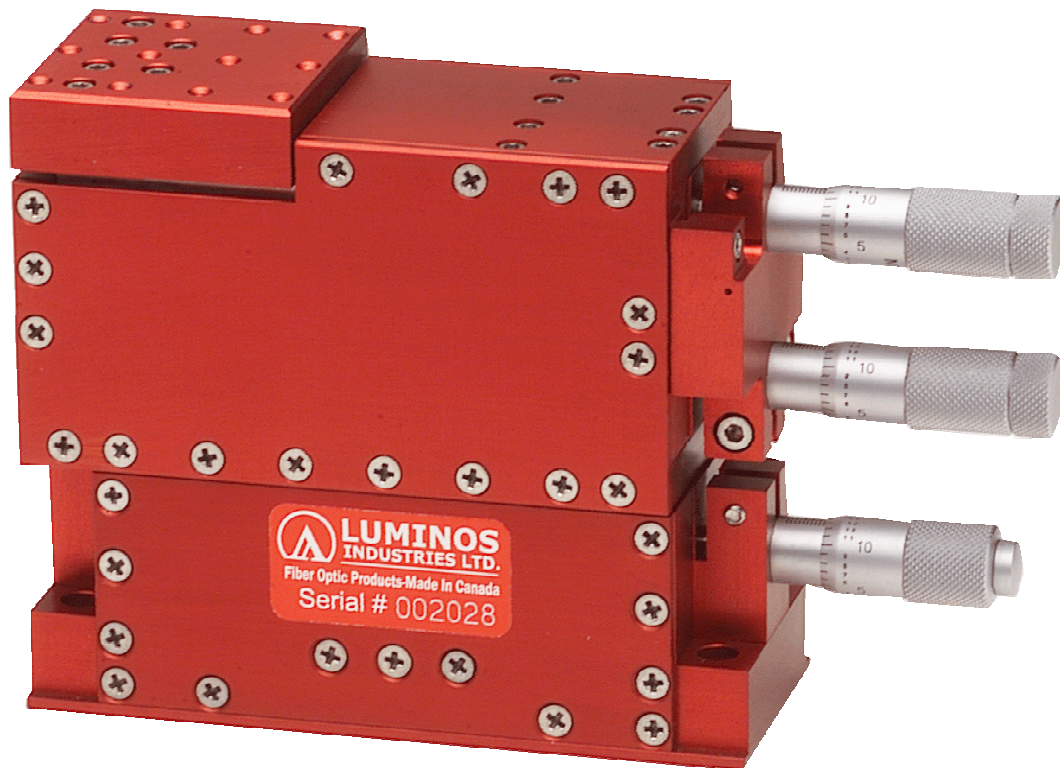


Table of Contents

Introduction to the I3000/I3005 Photonics Positioner	2
Feature Summary	3
Getting Started	4
Reading the Micrometers	4
Connecting an Automated Positioner	5
Actuator Control	5
Mounting the Positioner	5
Mounting Devices and Accessories	6
Accessories	6
I3000/I3005 Specifications	7
What is Ratio Drive™?	9
25x Ratio Drive™	9
5x Ratio Drive™	9
Stepper Motor Actuator	10
Enhanced Precision	10
Simple Interface	10
Manual Control	10
Flexible Interface	10
Actuator Specifications	10
Available Options	11
Dimensional Drawings	12
Unpacking and Transportation	14
Shipping Bracket Removal (Automated Positioners Only)	14
Locking Strip Removal	14
Contact Us	15
Mailing Address	15
Business Hours	15
Phone Contacts	15
Email Contacts	15
Warranty	16

Table of Figures

Figure 1 – I3000/I3005 3-Axis Positioner	6
Figure 2 – I3000/I3005 Positioner (manual) Dimensions - Front & End	12
Figure 3 – I3000/I3005 Positioner (manual) Dimensions - Top & Bottom	12
Figure 4 – I3000/I3005 Positioner (stepper motor) Dimensions - Front	13
Figure 5 – I3000/I3005 Positioner (stepper motor) Dimensions - Top	13
Figure 6 - Unpacking	14

Introduction to the I3000/I3005 Photonics Positioner

Welcome to the I3000/I3005 Photonics Positioner - a positioning system so stable and easy to adjust that aligning singlemode optical fibers is as simple as tuning a radio! There is no need to let go of the micrometers during operation; the I3000/I3005 is extremely touch insensitive. And with the patented ergonomic inline design, all micrometers are easily accessible on one side. Just rest your hand comfortably on the table and enjoy the ease and efficiency of quickly aligning any type of fiber.

No fiber alignment challenge is too difficult - even 1-2 micron core lensed fibers can easily be aligned. The Luminos I3000/I3005 uses a patented Ratio Drive™ for the X & Y axes resulting in less hysteresis and increased resolution.

Conventional stacked stages have separate frames with each frame simply mounted on the output of the previous stage. This results in the stiffness at the micrometer being degraded by the lack of stiffness between the mounting reference and output of each stage below it. Hand forces on the micrometer are then easily transmitted directly to the output causing the alignment to wander; thus typically resulting in an adjust-release-wait cycle by the operator.

In contrast, the I3000/I3005 consists of only two frames. The Z stage is one frame while all the other micrometers are anchored to a shared fixed frame that is attached directly to the output of the Z stage. The Z stage is exceptionally stiff and therefore is not a factor. By sharing a common rigid frame, forces exerted on the micrometers by the operator during adjustment are shunted directly to the base instead of to the output. The operator can then quickly align without letting go.

The I3000/I3005 is also vibration and temperature insensitive. Internal viscous damping eliminates many of the resonance effects typically associated with flexure stages.

Luminos stages generate extremely smooth linear motion utilizing patented flexure technology. The error motion associated with frictional ball bearings has been eliminated therefore these stages move with smooth monotonic motion. The force required from an actuator in order to move a stage is also linear without the typical sticktion that is found with ball or frictional type stages.

In general, single stage flexure designs are subject to arcuate motional error as each single stage moves in a physical arc. In the Luminos design, the large travel Z stage is a frictionless dual compensated flexure design wherein two precision flexure stages are made to move identically together such that the arcuate errors are eliminated. This technique offers a straightness of motion that is comparable to a precision bearing stage while affording a large travel not commonly found in flexure designs. The flexure stages used for transverse ("X") and vertical ("Y") motion are single stage flexures; however, they are oriented such that their resultant arcuate motions are in the large travel "Z" direction (typically the optical axis). The overall result is that the Luminos stages can be operated in even a manual mode without the operator experiencing objectionable off-axis motion.

Feature Summary

- Patented Inline actuators provide ease of access and multiple unit workstations.
- Patented Ratio Drive™ system affords superior resolution.
- Small footprint allows multiple unit workstations (Fig 2).
- Onboard controller for actuators avoids high cost of separate motion controllers.
- Damped exterior shell design provides superior vibration and touch insensitivity.
- Lightweight aluminum construction allows system to be moved easily by other motion equipment.
- High mechanical stiffness affords rugged and stable base system.
- Patented linear dual flexure Z offers frictionless repeatable straight travel.

With positioning this easy... the possibilities are endless.

Getting Started

Before unpacking the positioner, please read Unpacking and Transportation on page 14.

Reading the Micrometers

The following table gives the conversion necessary to interpret the numbers read from the micrometer.

Axis	Smallest Division (A)		1 Rotation (B)	
Y	1	μm	25	μm
X	1	μm	25	μm
Z	0.001	inches	0.025	inches


Each line on the shaft of the micrometer corresponds to one rotation. The “smallest division” refers to the divisions on the knob of the micrometer. Clockwise rotation of each micrometer causes movement in a positive direction as shown in Figure 1 (pg. 6).

To calculate the position, count the number of divisions on the shaft between the current position and zero. Multiply that number by the movement per rotation (B) given in the table above. Then, count the number divisions on the knob from zero; multiply that number by the movement per smallest division (A in the table above). Add the two products calculated to give the position. The formula is summarized as:

$$\text{Position} = (\text{Shaft_Divisions} \times B) + (\text{Knob_Divisions} \times A)$$

Note: If the coarse adjustment of the X or Y axis is moved, the position read from the micrometer of that axis will not be the same physical position as before moving the coarse adjustment.

Connecting an Automated Positioner

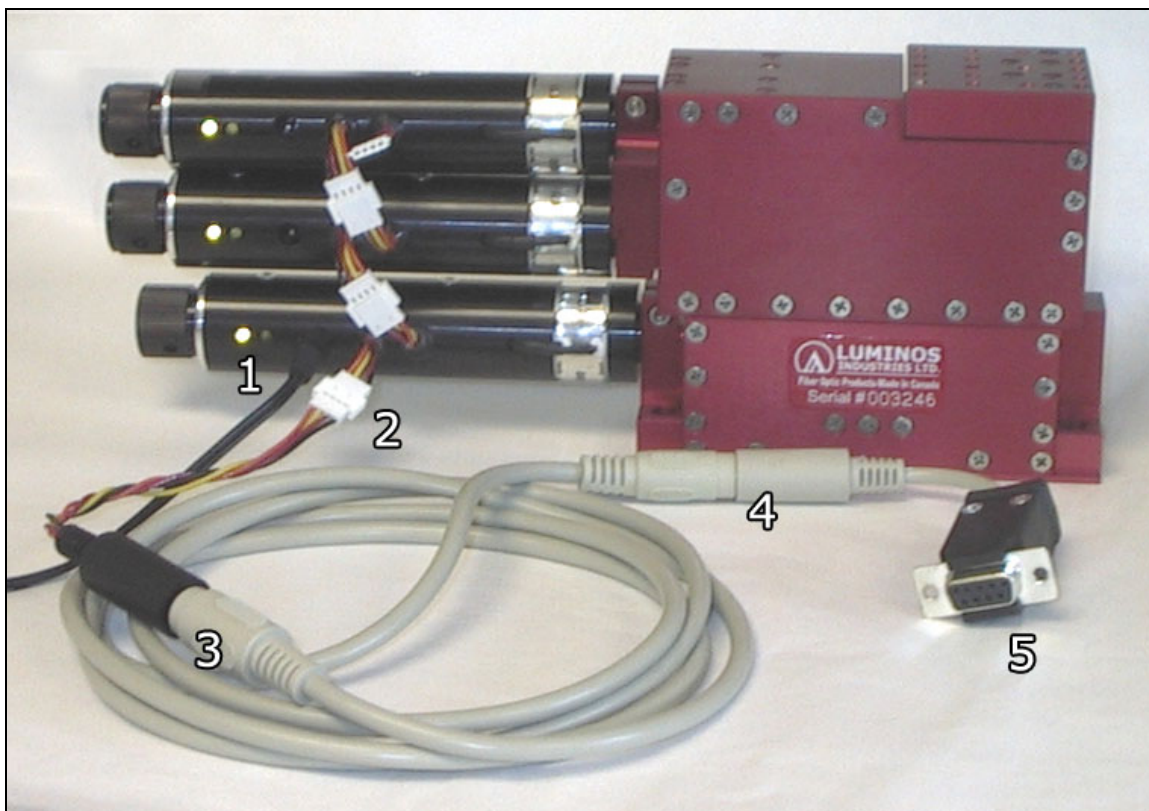

To connect your positioner, use the following steps:

1. Connect the 12V DC (minimum 800mA) adapter to the bottom actuator.
2. Connect the adapter with the matching white connector to white connector on the bottom actuator closest to the manual knob. On any positioner with more than one axis, this will be the only white connector available on the bottom actuator. (Do not disconnect actuators that are already connected).
3. Connect the other end of the adapter (a male mini-din 6 pin connector) to the mini-din extension.
4. Connect the other end of the extension to the remaining adapter.
5. The end of the cable is a standard 9 pin serial connection and should connect to one of serial ports on the back of the computer.

Actuator Control

The documentation for actuator control is included in the accompanying compact disc (if applicable). This format allows easy access from within most software development environments.

Mounting the Positioner

The I3000/I3005 mounts using 1/4-20 screws on 1 inch and 4 inch centers (see Figure 3 – I3000/I3005 Positioner (manual) Dimensions - Top & Bottom, pg 12)

Mounting Devices and Accessories

The device mounting plate (shown in Figure 1, pg. 6) is where devices and accessories are mounted. For dimensions, see Figure 3 on page 12. Also shown in Figure 1 (pg. 6), the center of rotation for all axes is 1 inch out and $\frac{1}{2}$ inch up from the end of the device mounting plate. To avoid having to adjust the X,Y and Z axes when rotating the device, the device alignment point should be as close as possible to the rotation center.

Accessories

There are many accessories available including a contact sensing system for sensing very small forces in the Z (focal) direction. Contact us if there is an accessory you require.

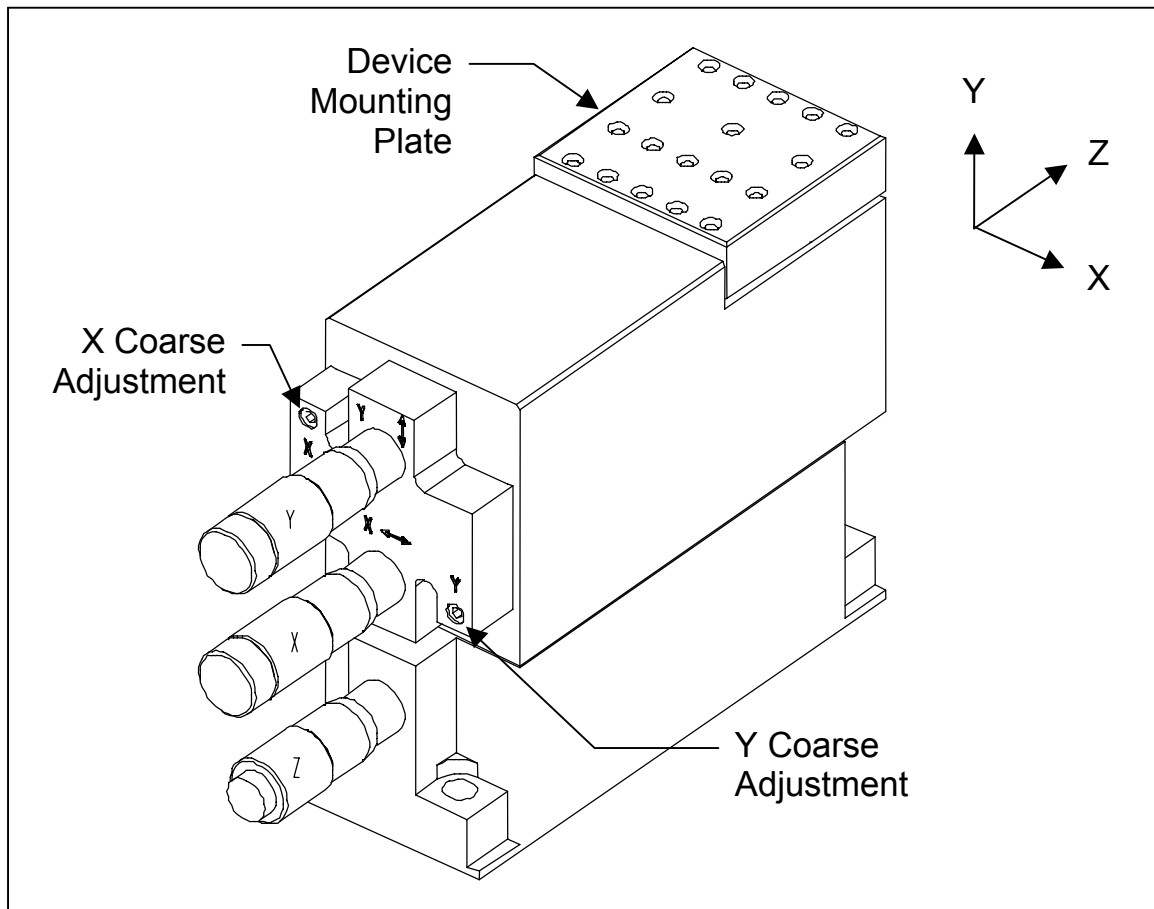


Figure 1 – I3000/I3005 3-Axis Positioner

I3000/I3005 Specifications

Travel			
Axis		Actuator ¹	Coarse
Z – focus		12.7mm (0.5")	N/A
I3000	Y – vertical	0.5mm (0.02")	2mm (0.080")
	X – lateral	0.5mm (0.02")	2mm (0.080")
I3005	Y – vertical	2.5mm (0.1")	N/A
	X – lateral	2.5mm (0.1")	N/A
Setability ² (Micrometer)			
Axis		Resolution	Movement /Division
Z		0.25 micron (10μ-inch)	0.001"
I3000	Y	10nm (0.4μ-inch)	1μm - 25x Ratio Drive™
	X	10nm (0.4μ-inch)	1μm - 25x Ratio Drive™
I3005	Y	50nm (2μ-inch)	5μm - 5x Ratio Drive™
	X	50nm (2μ-inch)	5μm - 5x Ratio Drive™
Resolution (Stepper Motor)			
Axis		Resolution	Total Steps
Z		100nm (4μ-inch)	128 000
I3000	Y	4nm (0.16μ-inch)	128 000 - 25x Ratio Drive™
	X	4nm (0.16μ-inch)	128 000 - 25x Ratio Drive™
I3005	Y	20nm (0.8μ-inch)	128 000 - 5x Ratio Drive™
	X	20nm (0.8μ-inch)	128 000 - 5x Ratio Drive™
Stage Configuration & Arc Error Motion			
Axis		Flexure Type	Arc Error
Z		Dual	None - True Linear Motion
Y		Single	Max 30μm - Arc Error in Z only
X		Single	Max 30μm - Arc Error in Z only
Linear Stiffness			
Along Axis		Stiffness	Comments
Z		130 kN/m	measured at the rotation center
Y		95 kN/m	measured at the rotation center
X		40 kN/m	measured at the rotation center
Torsional Stiffness			
About Axis		Stiffness	Comments
Z – roll		75Nm/rad	measured at the rotation center
Y – yaw		100Nm/rad	measured at the rotation center
X – pitch		130Nm/rad	measured at the rotation center
Maximum Load			
Static Load		Transient Load	Comments
2.2 lbs (1kg)		10 lbs (4.5kg)	stage must be protected from shock loading during transport and usage

Physical Properties		
<i>Characteristic</i>	<i>Specifications</i>	<i>Comments</i>
Construction	Aluminum	6061 & 7075 - T6 anodized
Weight	1.0kg	Approximate
Body Dimensions	4.50" x 1.75" x 3.80"	LxWxH excluding micrometers
Mounting Height	3.94"	Base to top of mounting plate
Mounting Configuration	0.26" dia. holes	1.00" x 4.00" ³ centers
Concurrent Rotation Center	1/2"	Above top of mounting plate
	1"	Out from end of mounting plate

¹ 'Actuator' refers to a micrometer or stepper motor.

² Operator dependant

³ Compatible with 1.00" grid optical tables, units mount on 2" intervals with 0.25" allowance for routing of cables etc.

What is Ratio Drive™?

Ratio Drive™ is a means of "dividing down" the motion of the actuator to give higher resolution at the output of a positioner stage. This causes the output of the positioner stage to be only a fraction of the movement of the actuator - increasing resolution and decreasing backlash (since no gears are used in the Ratio Drive™). This technique allows the use of a standard micrometer or inexpensive stepper motor for enhanced, high precision alignment. Note: Ratio Drives™ are only on the X and Y axes.

25x Ratio Drive™

With the 25x Ratio Drive™, 12.7mm of micrometer travel is divided down 25.4 times to give 0.5mm of travel at the output plate. Coarse adjustments using an Allen key add an additional 2mm for a total of 2.5mm of travel. With the stepper motor actuator, the X & Y stages achieve a resolution of 4 nanometers on X and Y axes.

Products that incorporate the 25x Ratio Drive™ include the I3000, I5000 and I6000.

5x Ratio Drive™

A 5x Ratio Drive™ divides the motion down by 5 times so that one 12.7mm of actuator travel becomes 2.5mm at the output. With this option, there are no coarse adjustments and the full 2.5mm of travel is available from the micrometer or stepper motor. With the stepper motor actuator, the X & Y stages achieve 20 nanometers of resolution.

Products that incorporate the 25x Ratio Drive™ include the I3005, I5005 and I6005.

Stepper Motor Actuator

Enhanced Precision

The standard stepper motor actuator option provides a very high level of precision due to the patented Ratio Drive™ technology. Although the actuator itself only achieves a resolution of 100 nanometers, with the 25x Ratio Drive™ this is improved by a factor of 25 resulting in an incredible resolution of 4 nanometers.

Simple Interface

No external stepper motor drivers are required - these slim actuators actually contain an onboard RS-232 controller which interfaces directly with any standard PC serial port (or USB port with a low cost adapter).

An included ActiveX/COM™ software driver makes it easy to get up and running quickly in any windows based development environment (including Visual Basic, Labview, and C++).

Manual Control

A convenient knob at the end of the unit permits manual control. During a manual move the actuator constantly updates the connected computer with it's position. If accidental movement is a concern, the manual control can be enabled and disabled via computer control.

Flexible Interface

The actuator is also available with direct connections to the two phases of the bipolar stepper motor (4 wires). Access to a Hall Effect limit sensor permits initialization at a home position. This option allows those with an existing system for driving stepper motors to avoid changing over to RS-232 based control. However, for new applications, this option is not recommended due to the high cost of separate controllers.

Actuator Specifications

Description	Min	Typical	Max	Unit
Resolution		0.1		µm
Repeatability	± 0.2	± 0.3	± 0.4	µm
Accuracy	± 4	± 8	± 12	µm
Backlash	1.5	2	2.5	µm
Max Thrust	18	22	26	N
Max Speed		4		mm/s
Power Supply	12V DC unregulated 2.1mm center positive plug			
Current Draw	Idle: 100 mA Moving: 320 mA			

Available Options

Z Actuator

Manual Imperial Micrometer (default)

*A micrometer where the smallest division is 0.001 inches
(0.025" per revolution)*

Stepper Motor Actuator (RS-232)

See Stepper Motor Actuator (pg 10)

Differential Micrometer (Imperial)

*A double threaded micrometer for increased resolution where the smallest
division is 0.00002 inches.*

X Actuator

Manual Imperial Micrometer (default)

A micrometer where the smallest division is 1 μm (25 μm per revolution)

Stepper Motor Actuator (RS-232)

See Stepper Motor Actuator (pg 10)

Y Actuator

Manual Imperial Micrometer (default)

A micrometer where the smallest division is 1 μm (25 μm per revolution)

Stepper Motor Actuator (RS-232)

See Stepper Motor Actuator (pg 10)

XY Coarse Adjust

40 pitch set screw (default)

A flush set screw that gives 1/40 inches per revolution. Requires 3/32" ball point hex driver, McMaster-Carr Catalogue # 7268A54

40 pitch thumbscrew

A small knob that gives 1/40 inches per revolution at the output; allows easy adjustment of the coarse control.

80 pitch thumbscrew

A small knob that gives 1/80 inches per rotation at the output; allows easy adjustment of the coarse control.

Mounting Axis

Horizontal (default)

The positioner is balanced in the horizontal and upright position.

Vertical

The positioner is balanced with the micrometers pointing up. This configuration requires more preload on the z-axis.

Dimensional Drawings

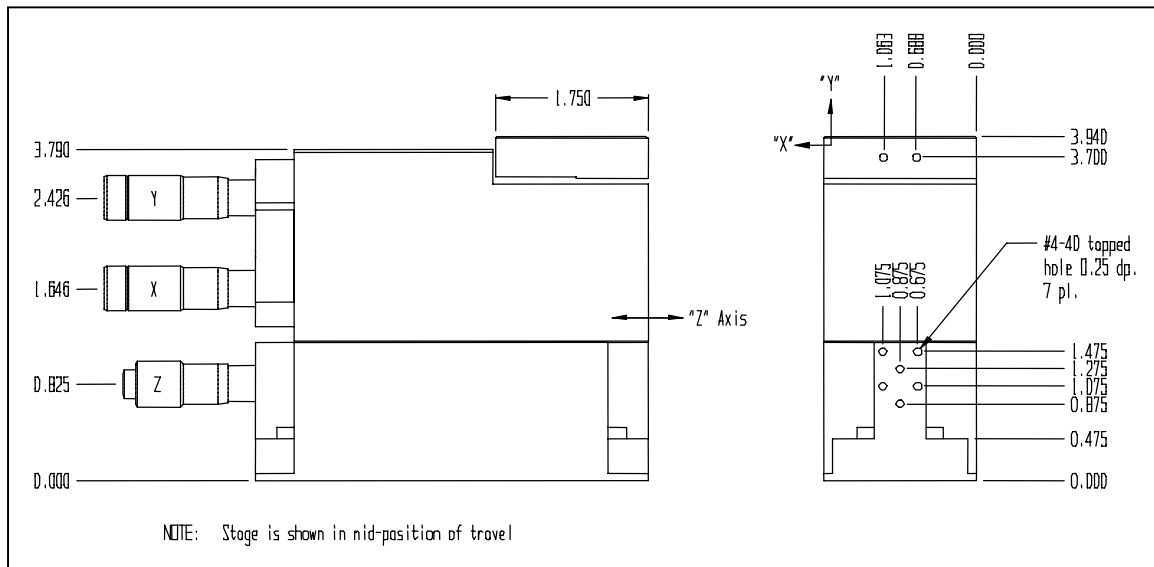


Figure 2 – I3000/I3005 Positioner (manual) Dimensions - Front & End

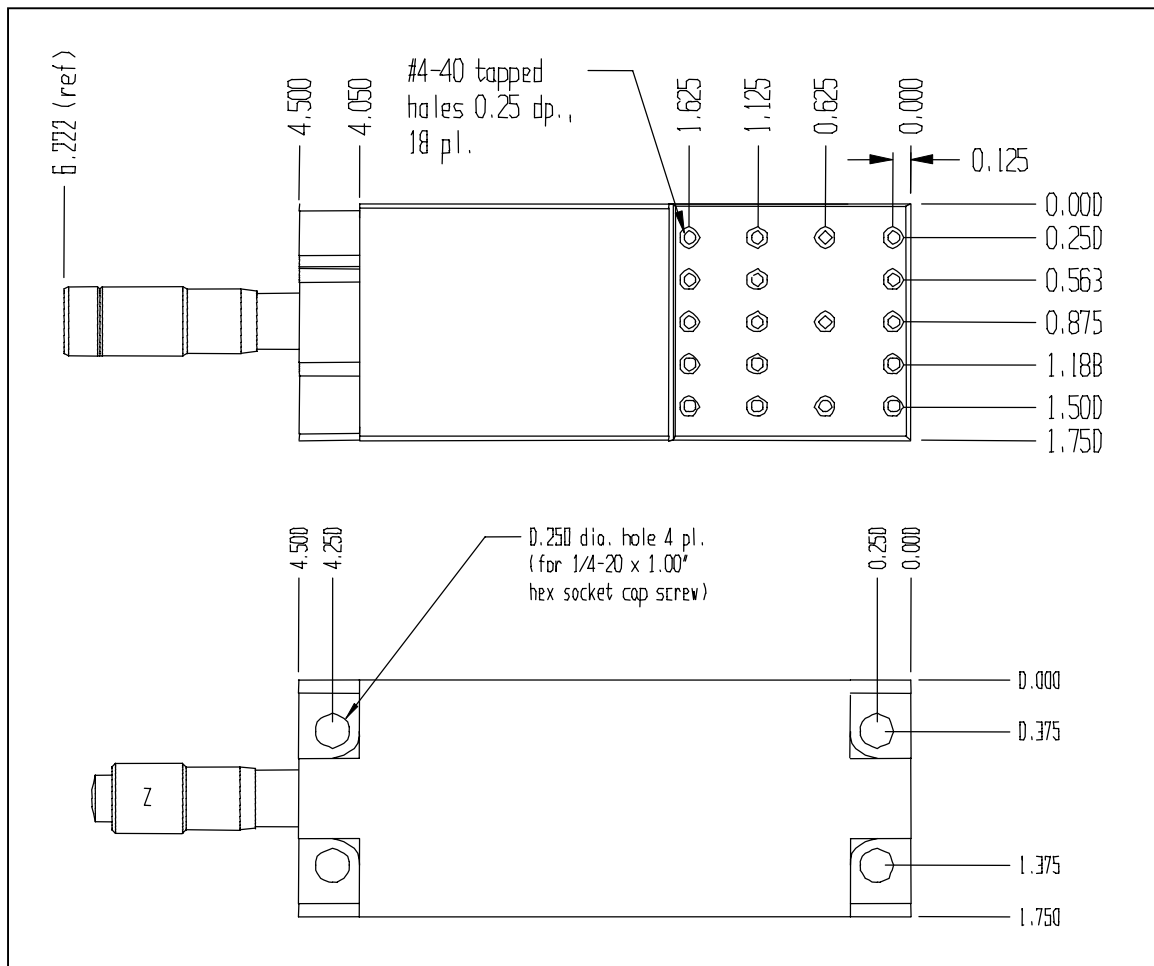


Figure 3 – I3000/I3005 Positioner (manual) Dimensions - Top & Bottom

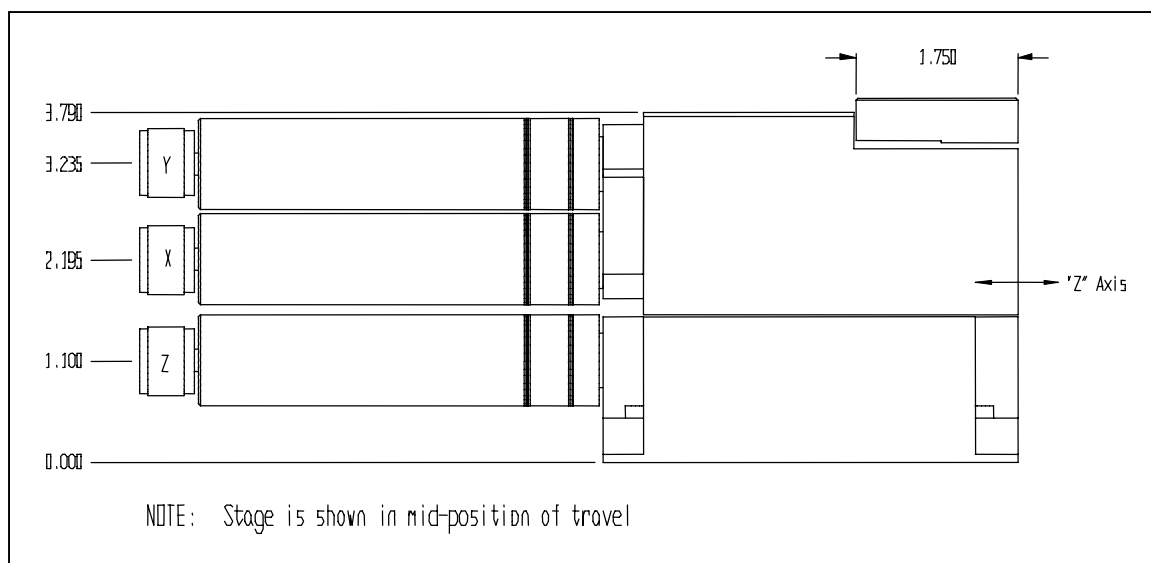


Figure 4 – I3000/I3005 Positioner (stepper motor) Dimensions - Front

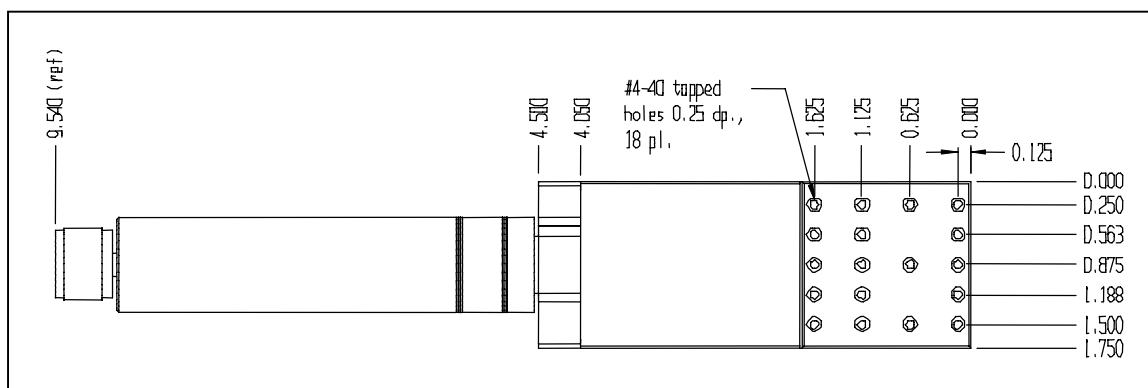


Figure 5 – I3000/I3005 Positioner (stepper motor) Dimensions - Top

Unpacking and Transportation

Do not discard packaging! The warranty is void if a Positioner is not shipped in the original packaging.

Shipping Bracket Removal (Automated Positioners Only)

Positioners with stepper motor actuators are shipped in a bracket (see Figure 6, below). To remove the bracket, unscrew the plastic support and gently and evenly pull the plastic support off the end of the actuators.

Locking Strip Removal

To prevent damage to the Z axis linkage during transportation a plastic locking strip is inserted between the upper and lower part of the unit (see Figure 6, below). To remove the locking strip, apply hand force to the upper portion of the unit (Z axis direction), remove locking strip and carefully allow the unit to return to its pre-loaded position. This procedure is applicable to all positioner types.

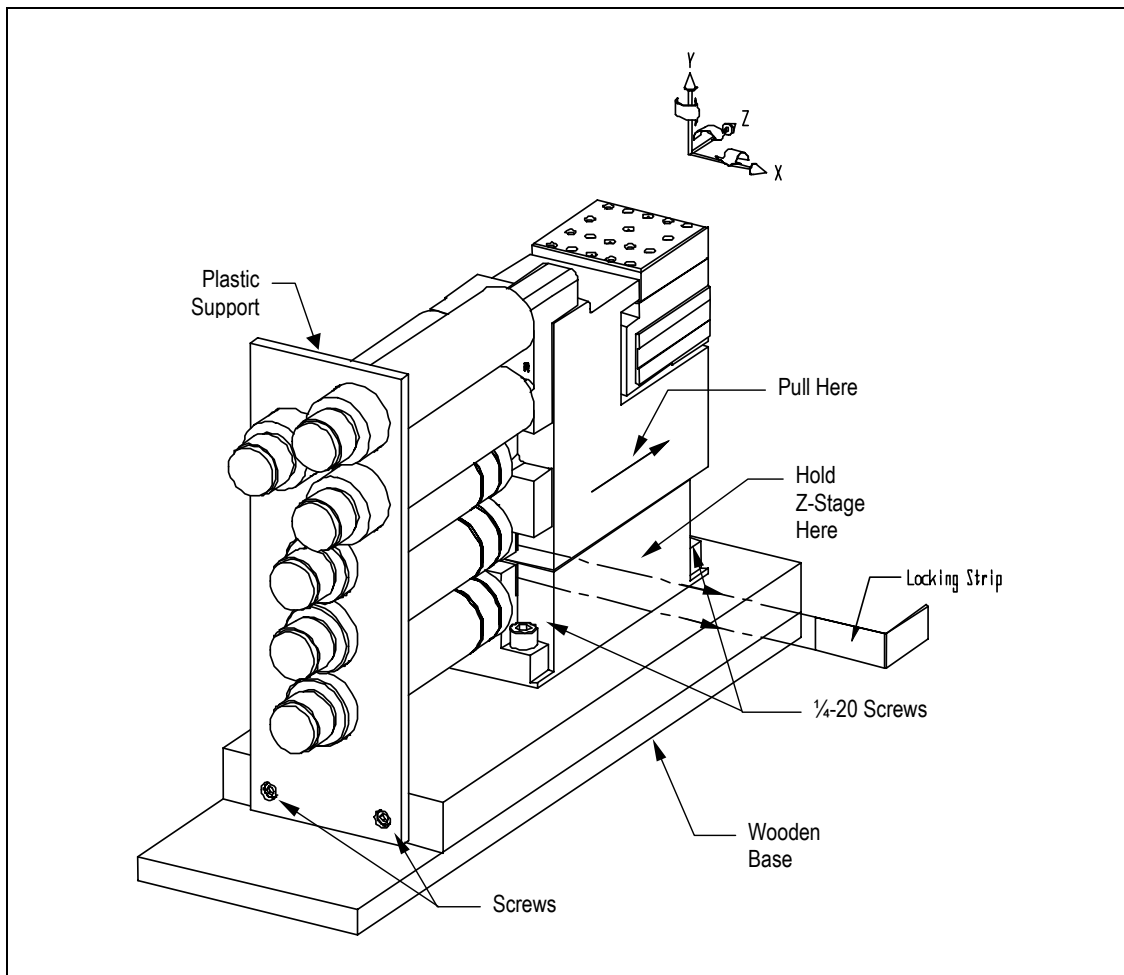


Figure 6 - Unpacking

Contact Us

Thank you for purchasing a Luminos product. We want to ensure your experience is a positive one. If you have any questions, concerns, or comments do not hesitate to contact us.

Mailing Address

Luminos Industries Ltd.
8-58 Antares Drive
Ottawa, Ontario
K2E 7W6 - Canada

Business Hours

Monday to Friday: 8:00am-4:30pm EST

Phone Contacts

Telephone: 1 (613) 225-7661
Fax: 1 (613) 225-3391

Email Contacts

Sales: sales@luminosindustries.com
General Inquiry: info@luminosindustries.com
Support: support@luminosindustries.com

Warranty

All items manufactured by Luminos Industries Ltd. are warranted to meet Luminos Industries' published specifications and to be free of defects in materials and workmanship as defined in the specifications for 90 days after delivery. Luminos Industries Ltd. will, at its own option, repair or replace without charge any listed item discovered to be defective.

Luminos Industries Ltd. will not be held liable for any loss whatsoever beyond the purchase price paid by the buyer for the goods to which claim is made. Luminos Industries does not give implied warranties of merchantability, fitness for a particular purpose, or of any other nature in connection with the sale of any Luminos Industries Ltd. products.

Products not returned in original packaging will void this warranty.

This warranty does not extend to cover damage resulting from alteration, misuse, negligence, abuse, normal wear and tear, or accident.



LUMINOS
INDUSTRIES LTD.

**58 Antares Drive
Ottawa, Ontario
Canada
K2E 7W6**

**613 225 7661 – tel
613 225 3391 – fax**

**www.luminosindustries.com
info@luminosindustries.com**